





Part No: SG41220 2 inch-52mm

## v20200814

# Installation Instructions


#### Important notes before installing:

- Installing this product to your vehicle may require an adaptor. SAAS offer a large range of adaptors and installation parts; please check with your SAAS dealer for available adaptors.
- SAAS Muscle series gauges are designed for 12volt systems ONLY!
- All installation work should be done by a qualified professional to avoid damage to this product.
- SAAS **RECOMMENDS** all products be tested prior to installation. This will save time and speed up the troubleshooting process if you encounter any issues.
- **BEFORE** installing, please check our website (**shopsaas.com**) for the latest fitting instructions. If the top left corner (**v**) number is different to website, please use instructions from website.

## Wiring Guide:


Wire colour Wire Function Wire Connection L		Wire Connection Location
Black	Ground 12V-	Vehicle body
Yellow	Park lights 12V+	Park light circuit (do <b>NOT</b> connect to a dimmer)
White	Battery 12V+	Ignition harness / Fuse box
Red	Ignition 12V+	Ignition harness / Fuse box

# Wiring Diagram Typical Layout

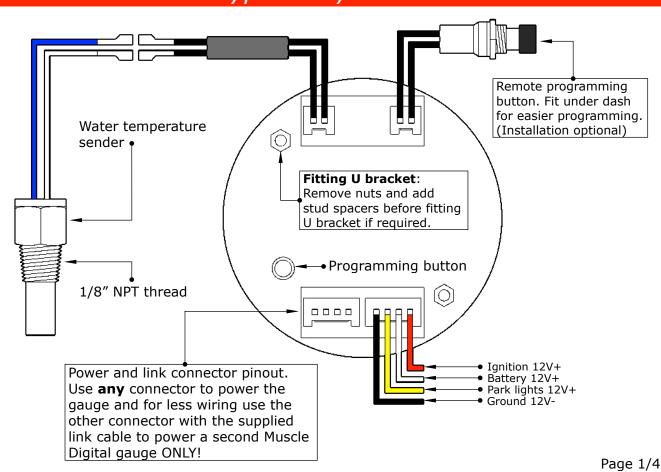


## **User Functions:**

**Note:** Use the remote programming button or the button on the back of the gauge to set the below functions.

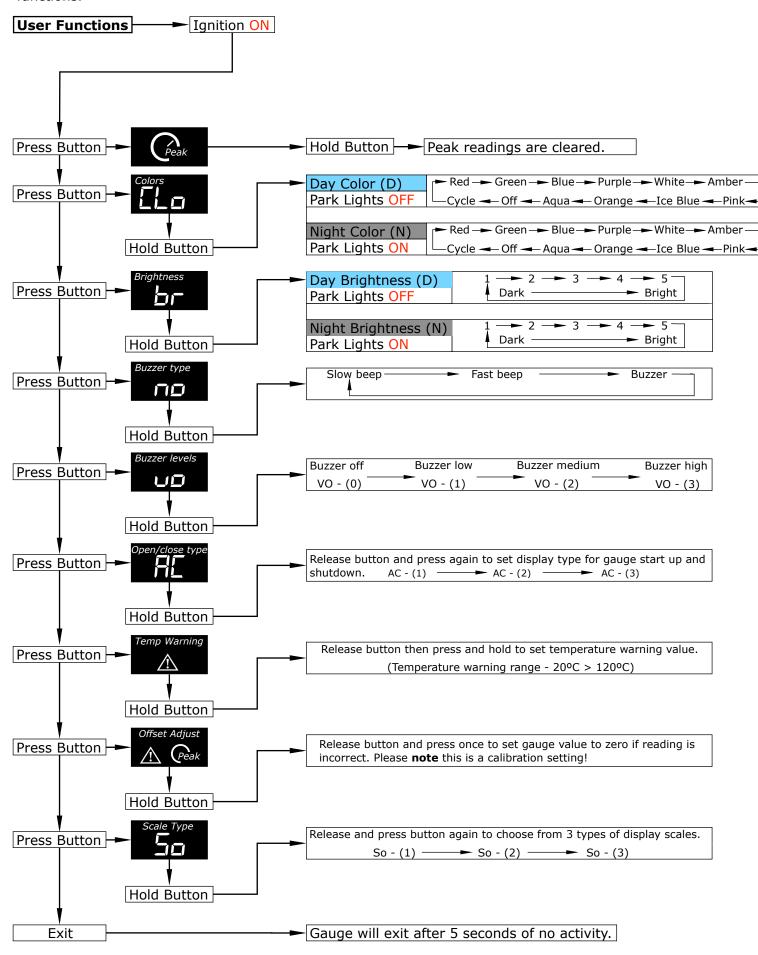

## Water Temp Sender Installation:

- Recommended sender locations:
- Water temp senders should be installed in a radiator, water temp adaptor or cylinder head.
- The most common way of fitting a water temp sender is by using a radiator hose adaptor, the adaptor is fitted to the vehicle's **TOP** radiator hose. The diagram below shows how a water temp sender and radiator hose adaptor is fitted.

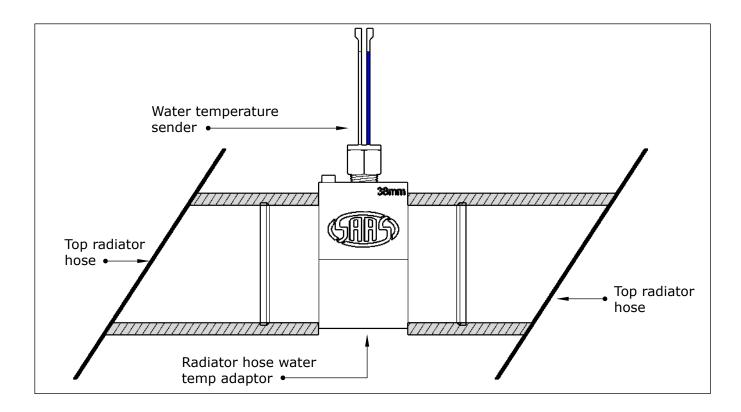

# **GAUGE INFORMATION**

# Specifications

Gauge operating range	20°C > 120°C		
Gauge operating voltage	8v > 18v		
Water temp sender ohms range	$60$ K $\Omega$ > 0.9K $\Omega$ , scale: 50K $\Omega$ @ 21°C or 6.14K $\Omega$ @ 80°C		
Water temp sender thread size	1/8" NPT		
·			
Water temp sender dimensions	total length 35mm		
Water temp sender wire length	2 metre wiring harness / 100mm on sender		
Gauge lighting type	10 colour LED with 5 levels of brightness		
Gauge lighting colours	red - green - blue - purple - white - amber - pink -		
	ice blue - orange - aqua - OFF - cycle mode		
Gauge power harness length	1 metre		
Gauge link harness length	300mm		
Mounting depth required for gauge	45mm (minimum)		
Total depth of gauge	50mm (including bezel)		
Mounting hole size for gauge	52mm		

For further assistance email: tech@saasautomotive.com.au

## **Troubleshooting:**

**Please note:** If you are having problems with the installation of this product, please do not contact your retailer or SAAS until you have read **ALL** the troubleshooting notes below.

Problem	Possible Cause	Solution	
-gauge beeps but no	-incorrect wiring	-refer to fitting instructions	
display	-display is set to (OFF)	-press button to change backlight colour	
-water reads ()	-sender not plugged in	-check connector on gauge and sender	
-readings jump around	-water temp cable is too long or	-use the supplied cable and only extend	
	too thick	with the same thickness cable if needed	
	-sender or cable damaged	-test sender using a multimeter, a good	
		sender should read:50KΩ@room temp 21°C	
-gauge beeps and	-warning function activated	-adjust warning settings accordingly	
flashes randomly			

#### Contents:

In The Box		Notes	Part No.
Water temperature gauge			
Water temperature sender and 2 pin gauge harness	1		SG91001
Remote programming button	1		SG4106
Gauge power connector	1		SG9100
Gauge link connector	1		SG9101
Mounting U bracket with studs, nuts and washers		(M4x0.7 thread)	SG61005
Fitting instructions	1		

## Warranty Terms & Conditions:

SAAS Automotive Pty Ltd warrants this product against defects in factory workmanship and materials for a period of twelve (12) months from the date of original purchase. This warranty applies to the first retail purchaser, is non-transferable and covers only where the product has been subjected to normal use or service. Provision of this warranty shall not apply to any SAAS Automotive product that has been used for a purpose for which it is not designed, or which has been altered in any way that would be detrimental to the performance or life of the product, or misapplication, misuse, negligence or accident. Warranty claims to the manufacturer must be transportation prepaid and accompanied with dated proof of purchase. On any part or product found to be defective after examination by SAAS Automotive Pty Ltd, SAAS Automotive Pty Ltd will only repair or replace the merchandise through the original selling dealer or on a direct basis. SAAS Automotive Pty Ltd assumes no responsibility for diagnosis, removal and/or installation labour, loss of vehicle use, loss of time, inconvenience or any other consequential expenses. The warranties herein are in lieu of any other expressed or implied warranties, including any implied warranty of suitability, and any other obligation on the part of SAAS Automotive Pty Ltd, or the selling dealer.

## For further assistance email: tech@saasautomotive.com.au



SAAS Automotive PTY LTD
25 Metrolink Circuit West, Campbellfield,
Victoria 3061 Australia
ABN: 48166279670
ACN: 166279670

Phone: +61 3 9930 0100 Fax: +61 3 8339 2270 Email: tech@saasautomotive.com.au Web: www.shopsaas.com

Page 4/4